



### Placing Silica Gel

Now, you can finally take the air conditioners out of their packages. First, remove the white packet of silica gel from plastic bag. Place it inside of the capsule in between contents and wall of capsule. Cut the silver packet of Ageless® oxygen absorbers. Place absorber(s) in as shown, dispersing evenly within the container. If your time capsule is less than  $\frac{3}{4}$  full of items, you may need more Ageless®. Contact us if you do. A minimal charge will apply.



### Sealing the Lid in Place

Taking care to fit the lid in the same way that it was originally applied, place the newly prepared lid onto the capsule's body. Evenly, press down firmly (not too much pressure) until it bottoms out. In this way, it will press through the sealer and leave no gap between the capsule and the lid. **Caution: don't put a load on it.** Otherwise its seal will loosen. Leave in its relaxed position and don't touch for 2 hours, and if possible leave it along for 8 hours before moving. It will be fully cured in 24 hours.

Disclaimer: No liability is assumed with respect to the use of the product or information contained herein.

© 2003, 2005 Future Packaging & Preservation Covina CA. 91722

*Future Packaging & Preservation*



544 E. Edna Place  
Covina, CA 91723

Toll Free: 800.786.6627  
Phone: 626.966.1955  
Fax: 626.966.5779  
Email: sales@futurepkg.com

# SEALING INSTRUCTIONS

*For Your Model 4200 Capped Model Time Capsule*



*Your capped lid is fitted to the body, and it may fit better one way than another. Be sure to note the position of the lid when you remove it.*



*Future Packaging & Preservation*


Date: 12-21-2005

## CONTENTS:



### Neutral Cure Silicone Sealant & Applicator Tip (included)

Have a sharp utility knife or scissors handy to cut the tip. And, a pair of disposable gloves along with a paper towel or two will aid in cleanup.

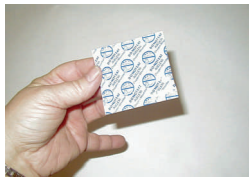

### Ageless® Oxygen Absorber packets (included inside of the silver packets)

Don't open the silver packets yet! This is what they look like. You don't want the packets to start working too early! Have a pair of scissors handy to use on it when you're ready later.



### Silica Gel packet (included)

Keep this in its plastic pouch, too, to protect it from dampness in the air until you're ready to close the capsule.



### & Your Model 4200 Time Capsule

This is your two-piece stainless steel time capsule body and capped lid. You may want to wipe off fingerprints with acetone. Wash inside with mild dish soap and water. Be sure to rinse well. Dry with clean, soft towel or cloth.

**SEALING INSTRUCTIONS:** Your of capsule may vary slightly from those shown.



### Place prepared items in your Time Capsule.

Properly enclosed items are placed into the time capsule and cushioned as necessary.



### Place any notes inside as to contents, their preparation, etc.

Write with a pencil, or you can use a pen whose ink is pigmented.



### Opening Sealant—Be Careful!!

With a sharp pair of scissors or a utility knife, carefully cut the end of applicator tip so that you start with a hole diameter of about 1/4". Remove small white cap from tube of sealant, turn it around and punch hole so that the sealant can flow out when you want it to. Take white applicator and screw it onto the tube firmly.



### Applying the Sealant

Squeezing gently, place a good bead of the sealant along the inner corners and along the angle of the cap. If your bead doesn't flow properly, cut off the applicator tip a bit more (perhaps to a diameter of 3/8"). Bead flow can be varied by the amount of pressure you squeeze with and how quickly (or slowly) you work.



Basically, you want to evenly coat this inner area where the top edge of the capsule body will meet it. Make the bead continuous, all around.



Put on a disposable glove, and with your index finger, flatten the bead in a continuous motion all around to form a fillet shape. In this way, you will fill any air gaps.